 


INSTALLATION MANUAL

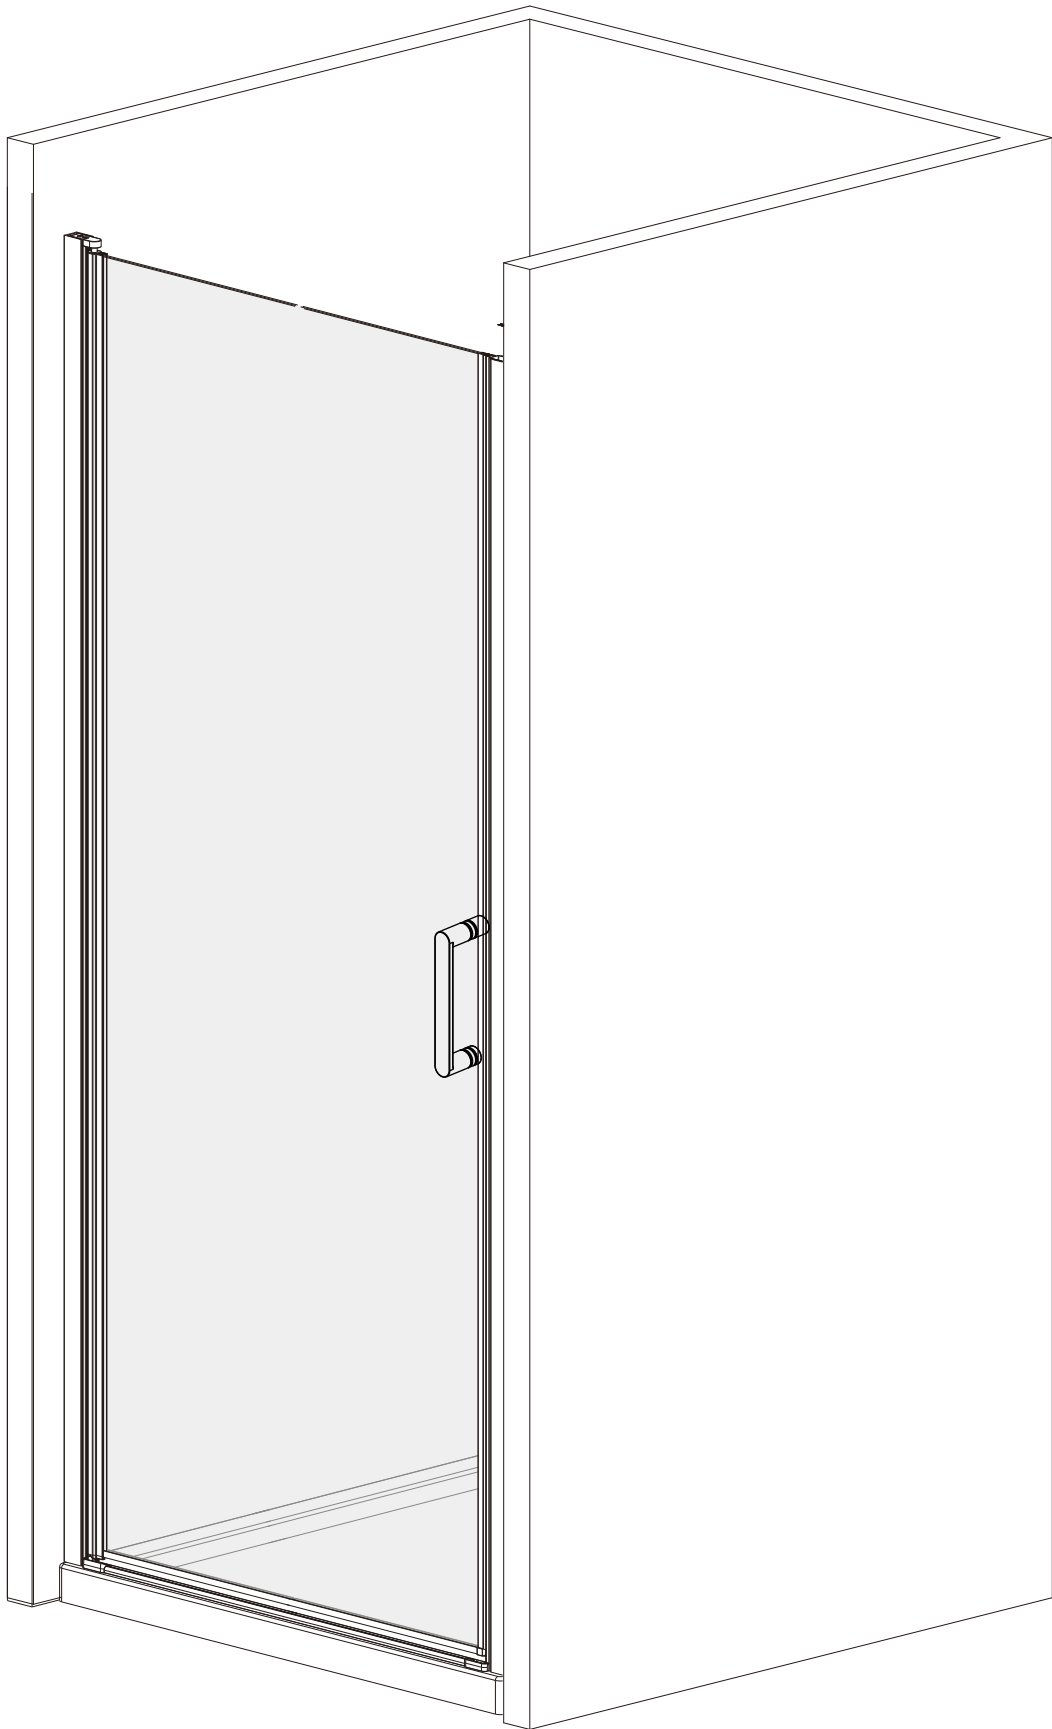

Astra 580110-70
Astra 580110-70B
Astra 580110-80
Astra 580110-80B
Astra 580110-90
Astra 580110-90B

◆ Assembly Drawing

[1]

[2]

[3]

[4]

[5]

[6]

[7]

[8]

[9]

[10]

 
[11]

 
[12]

[13]
















[14]
















[15]









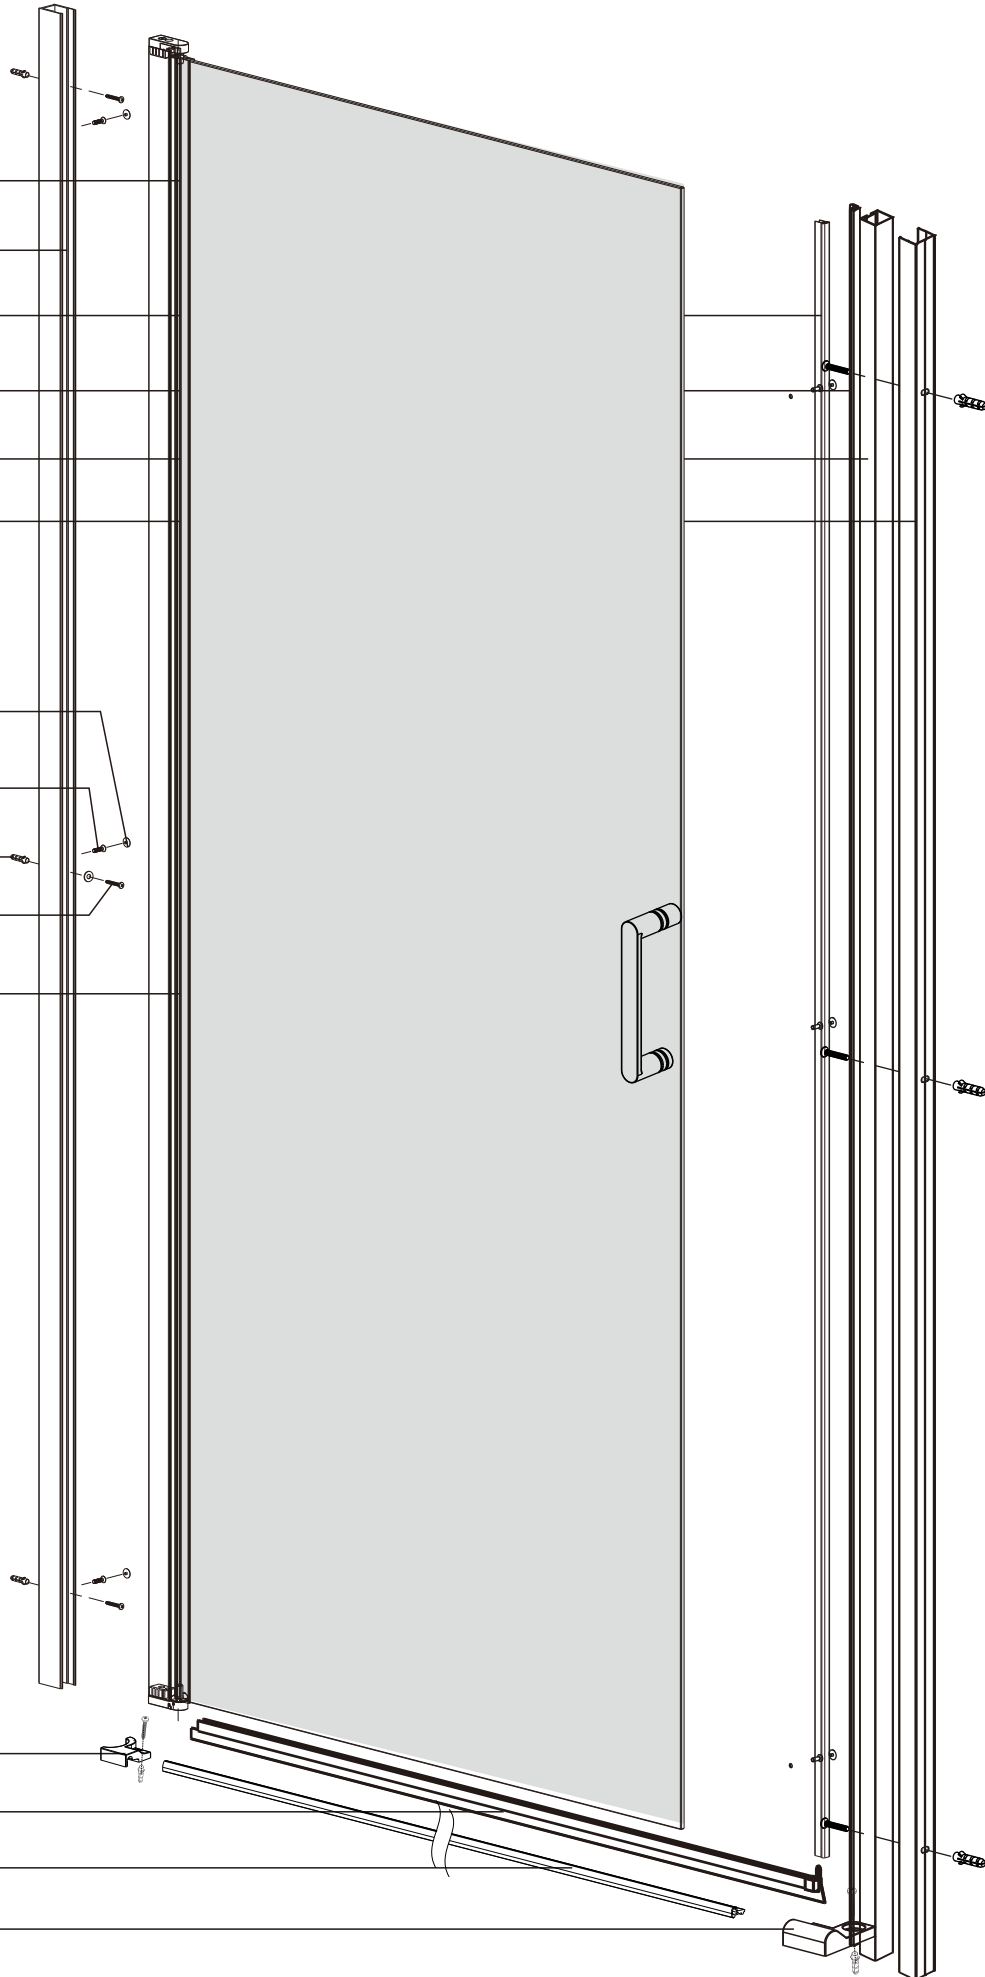












◆ Box Contents

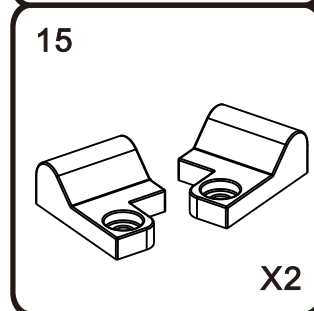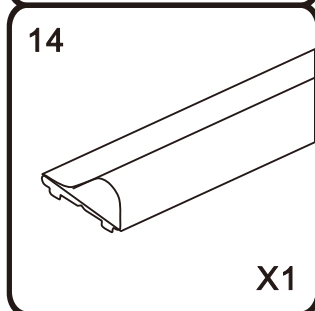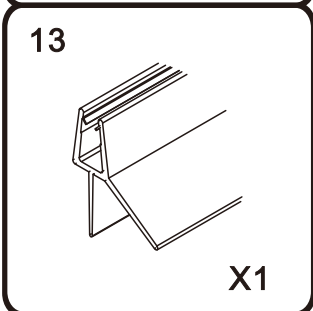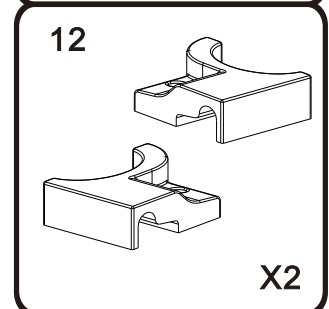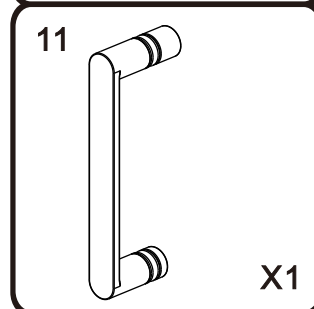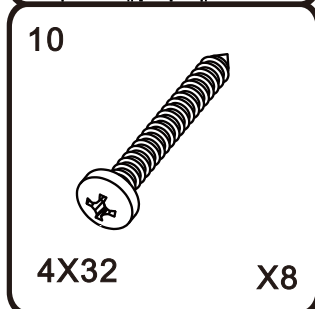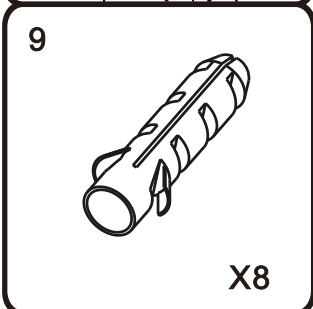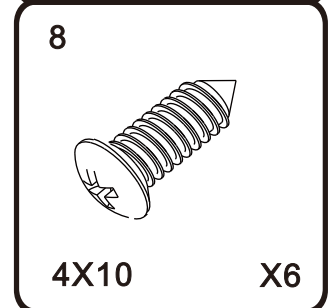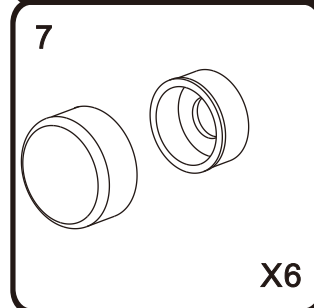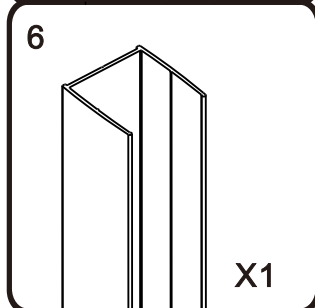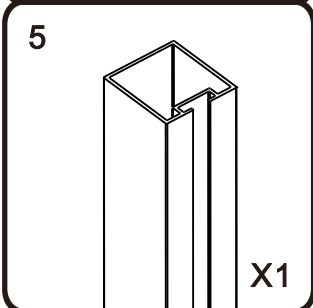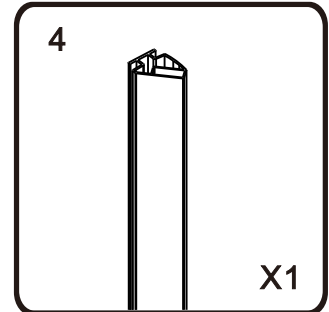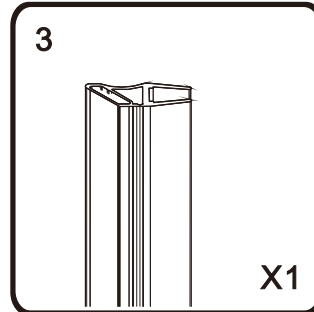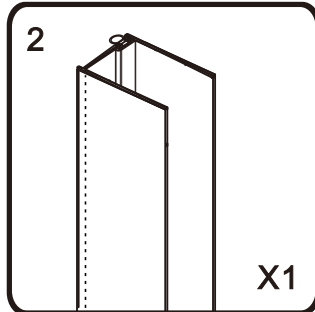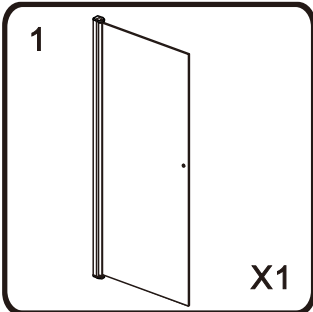               

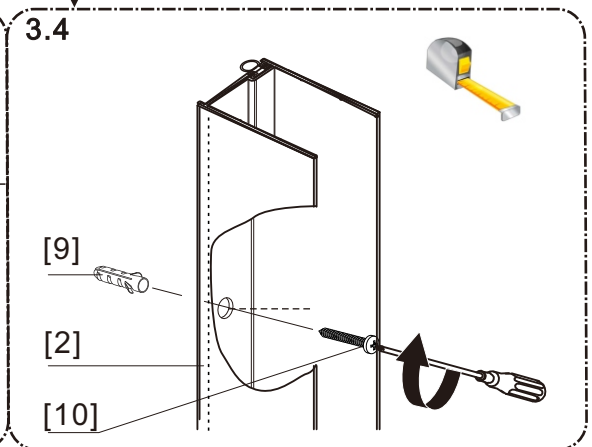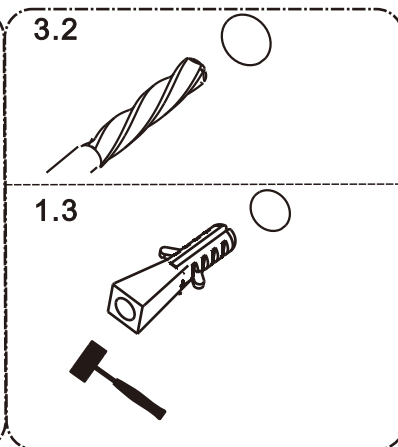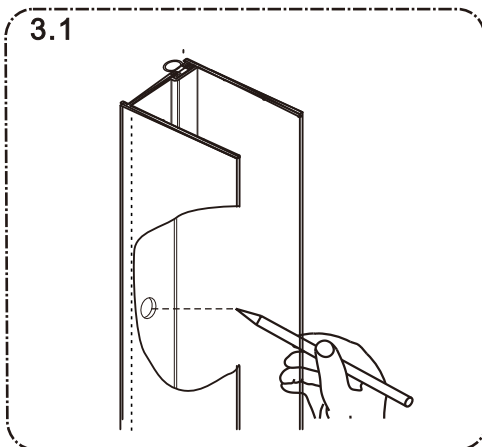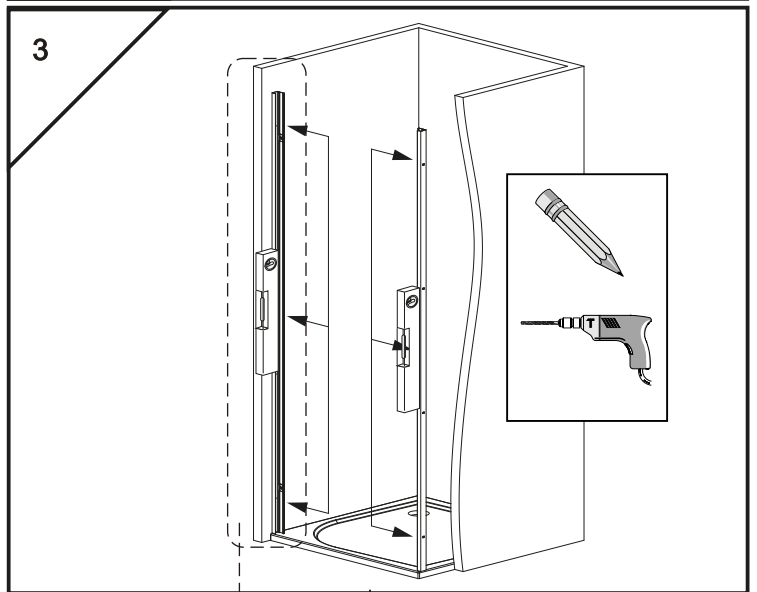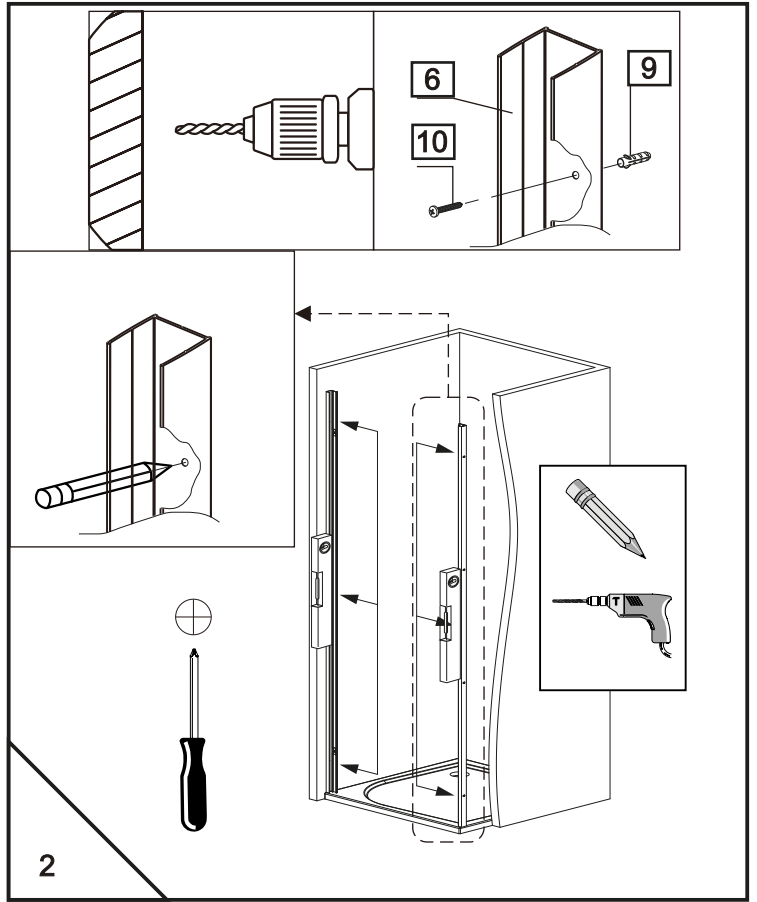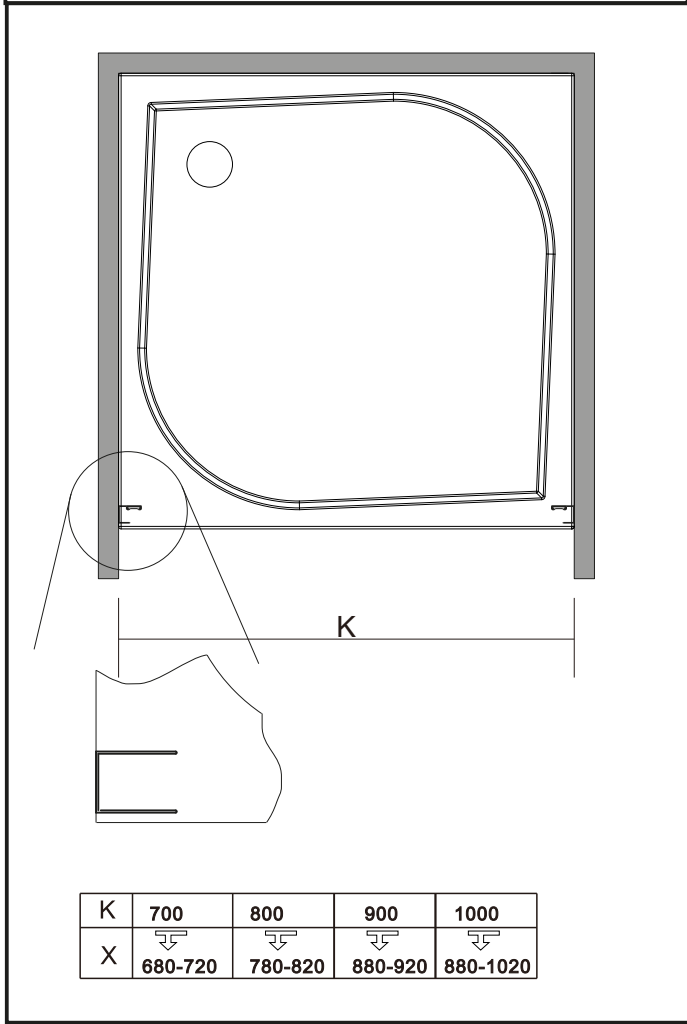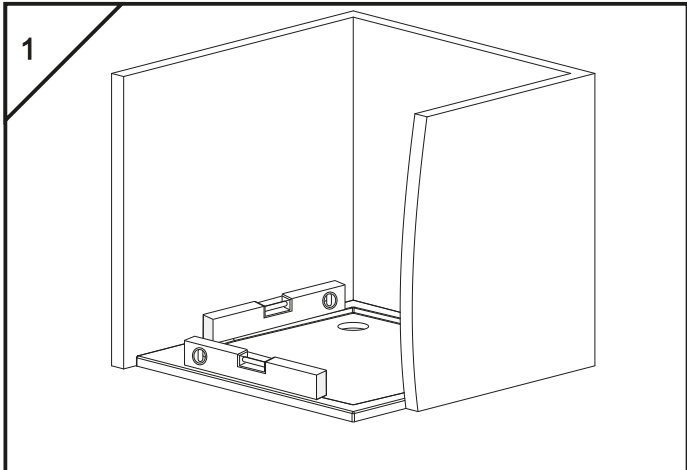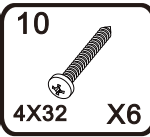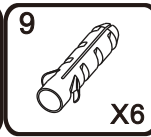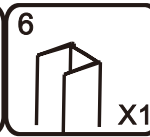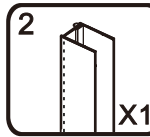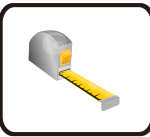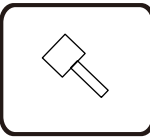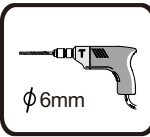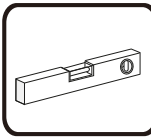               


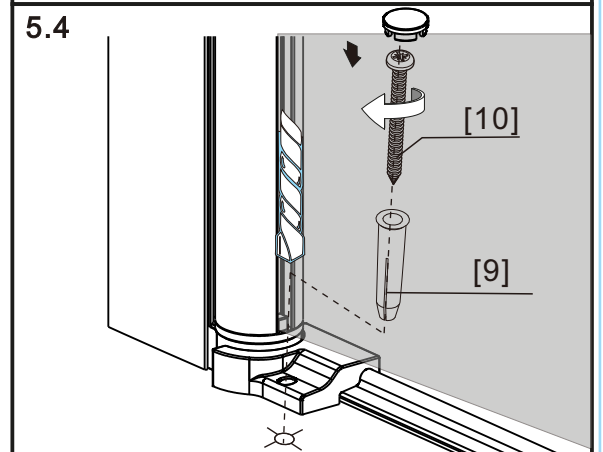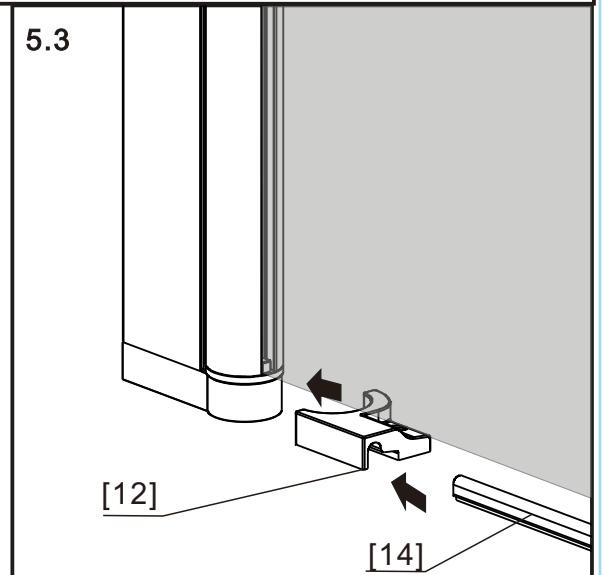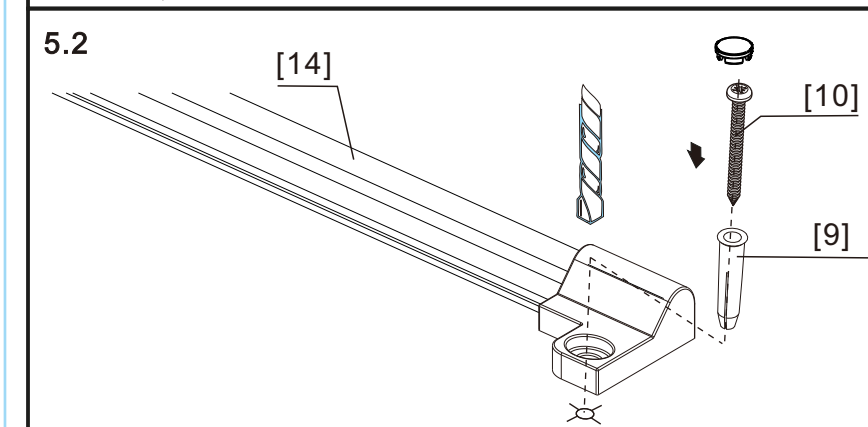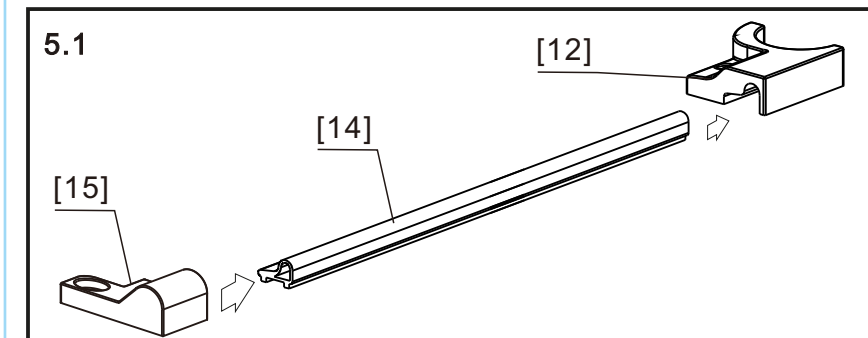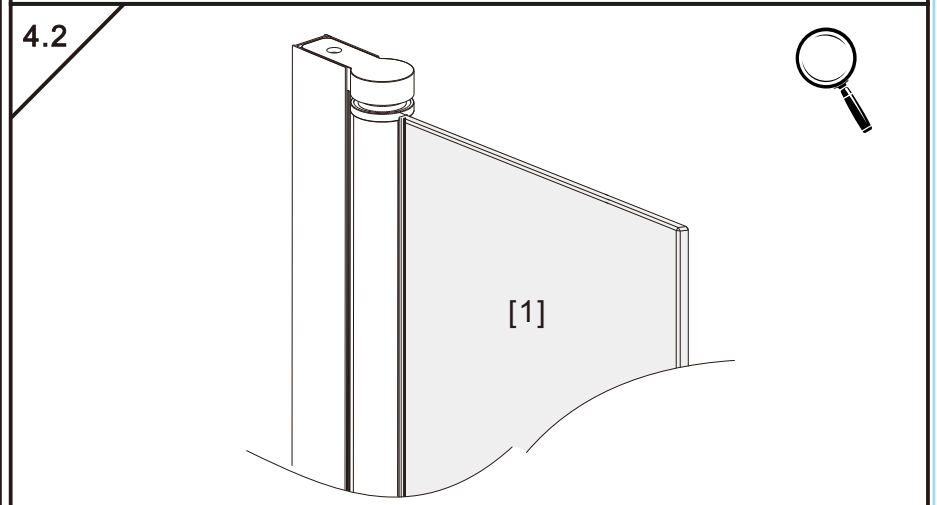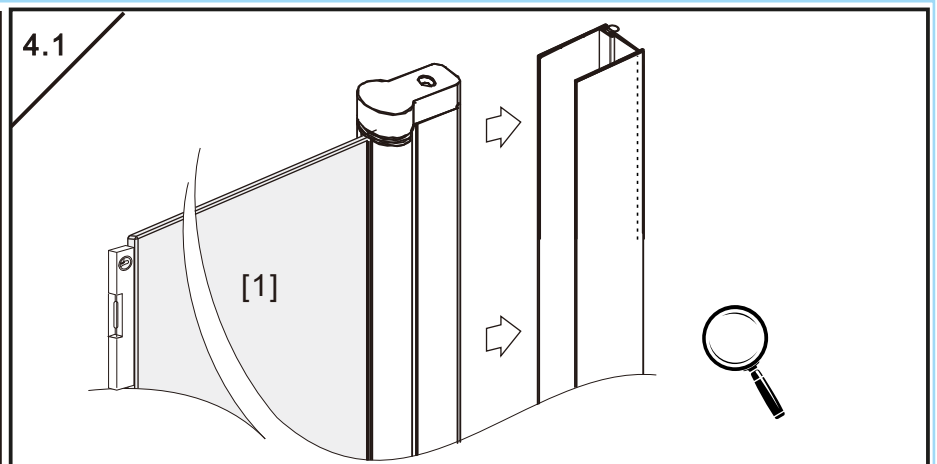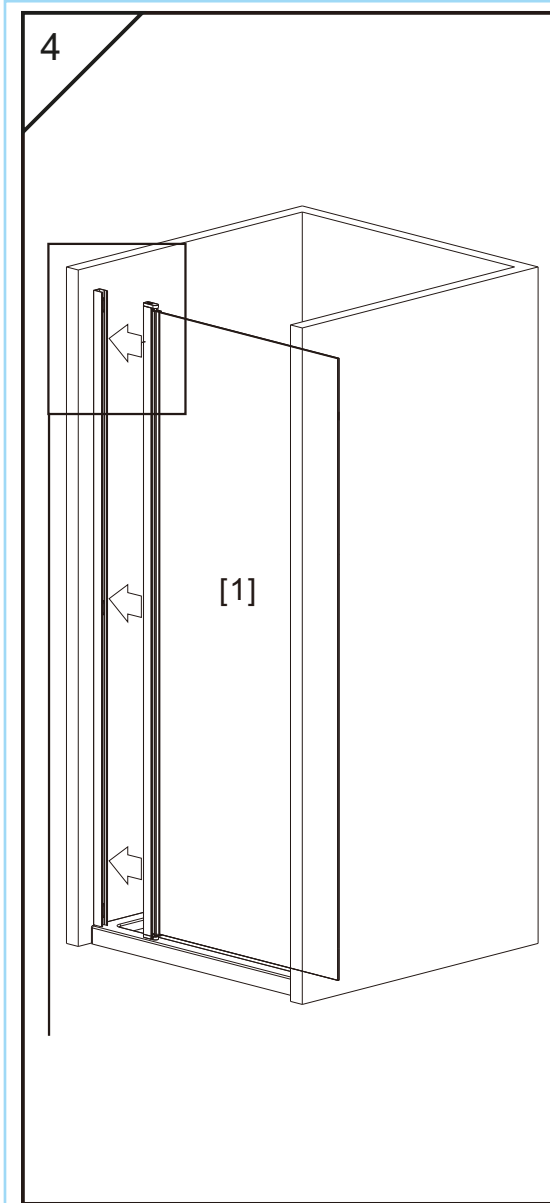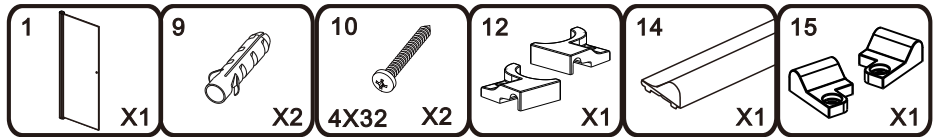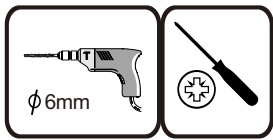         

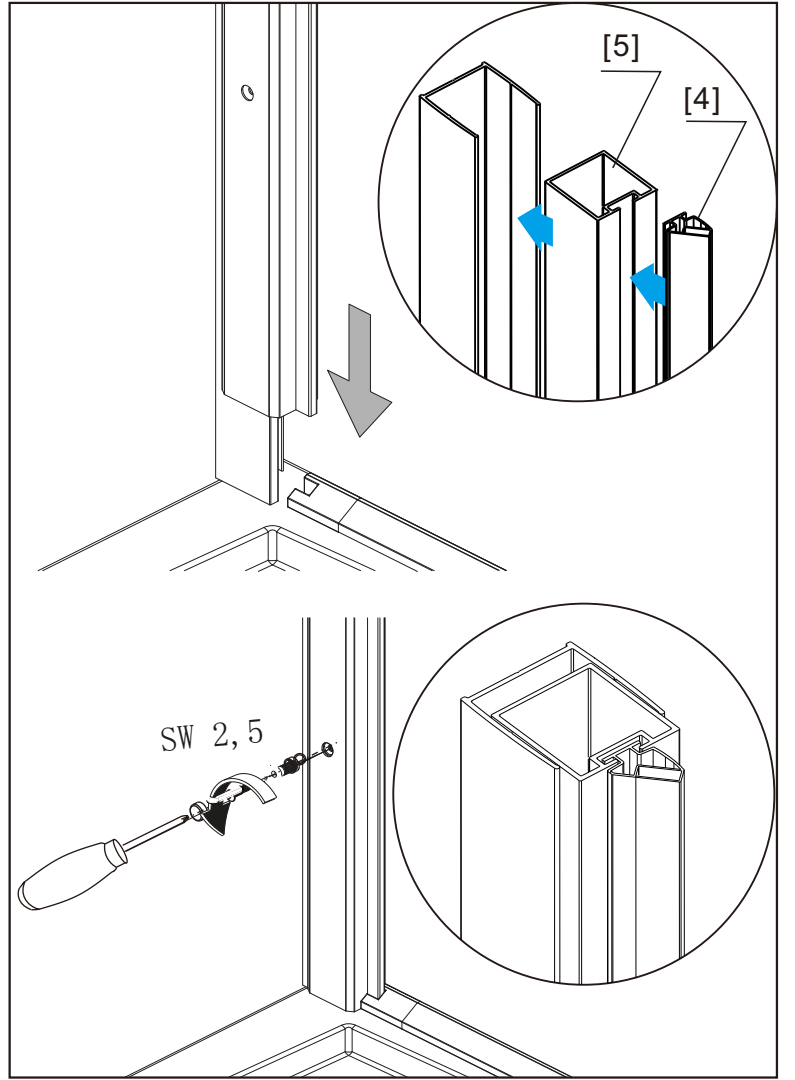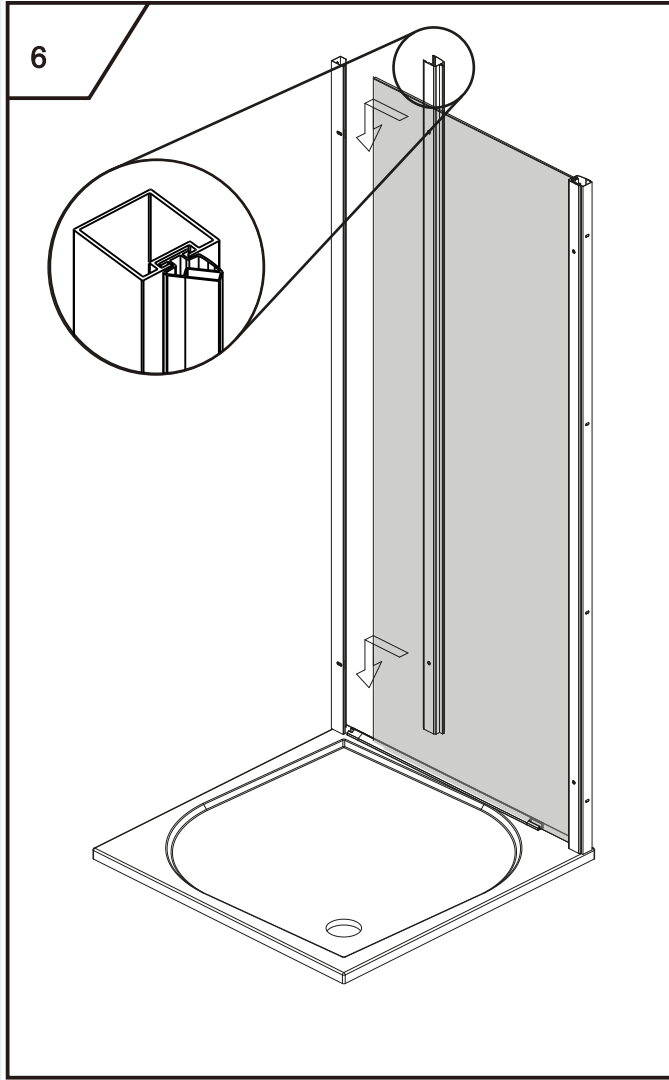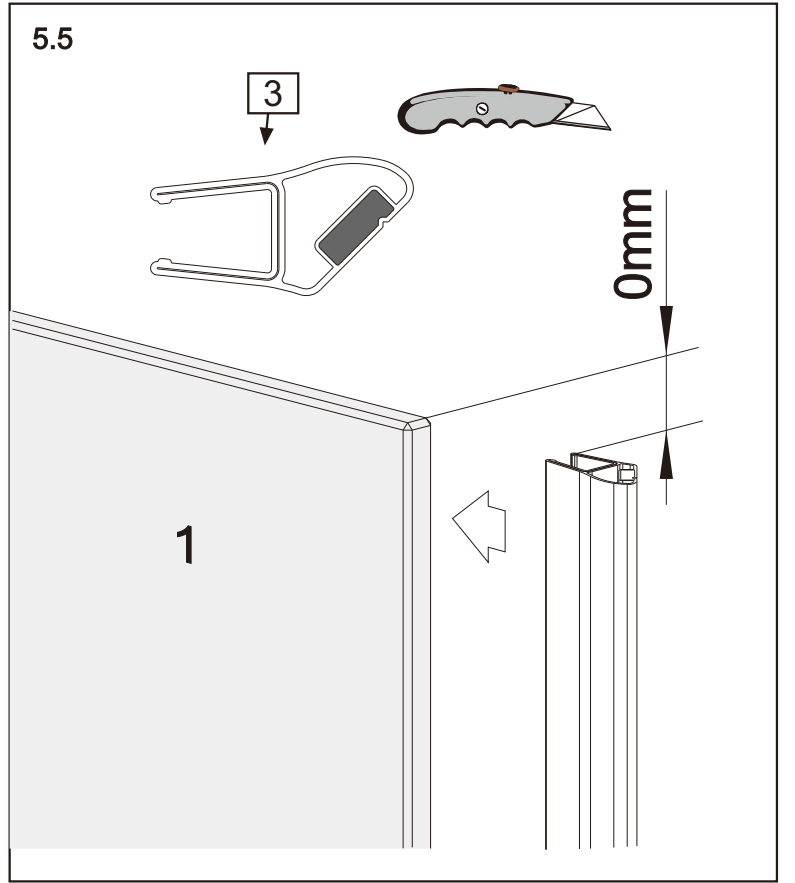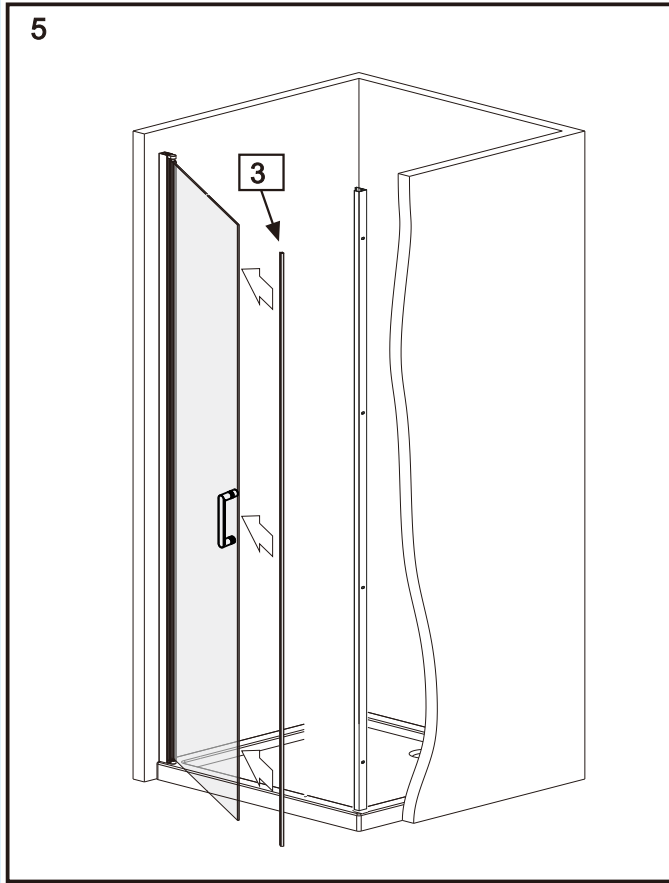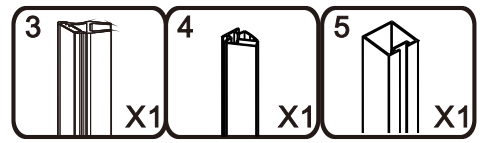     



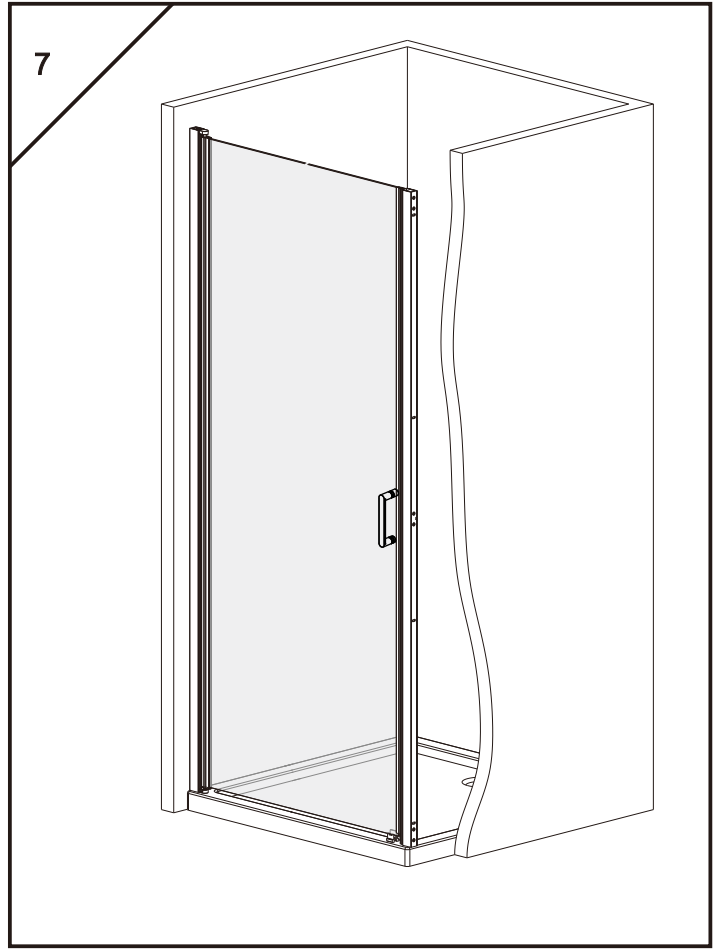 
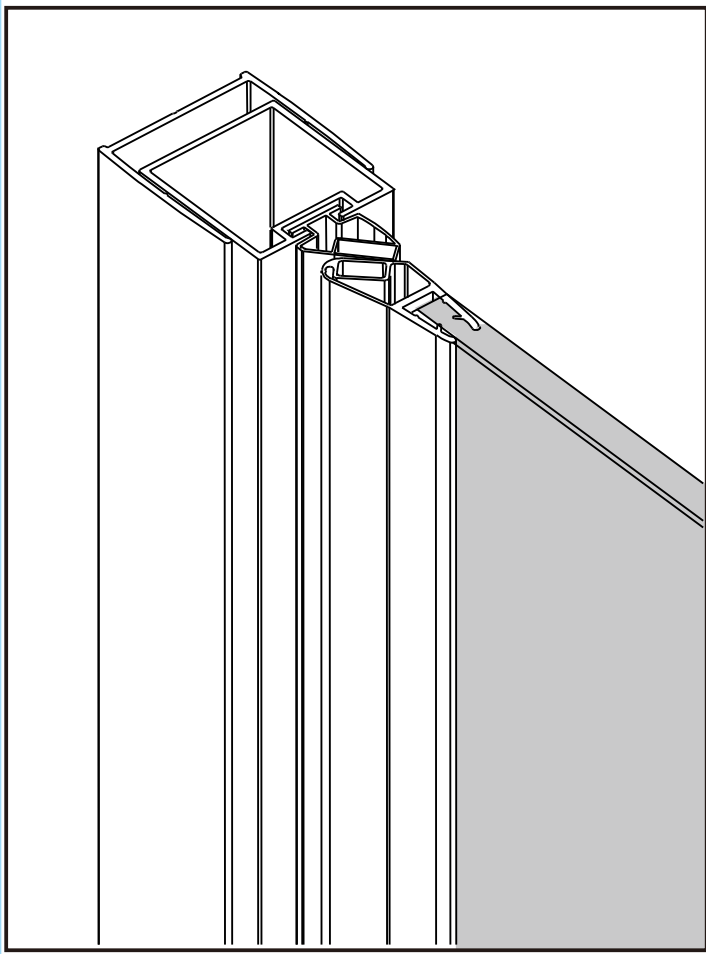 
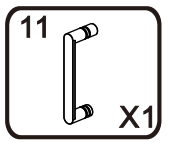 



 
7.1

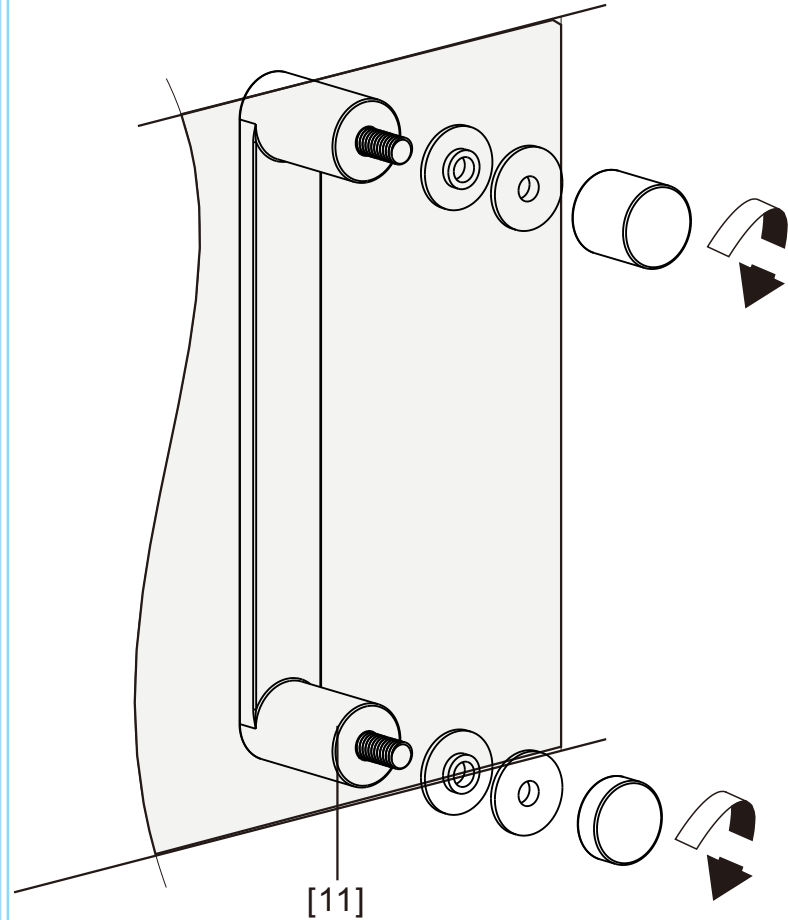

       
7.2

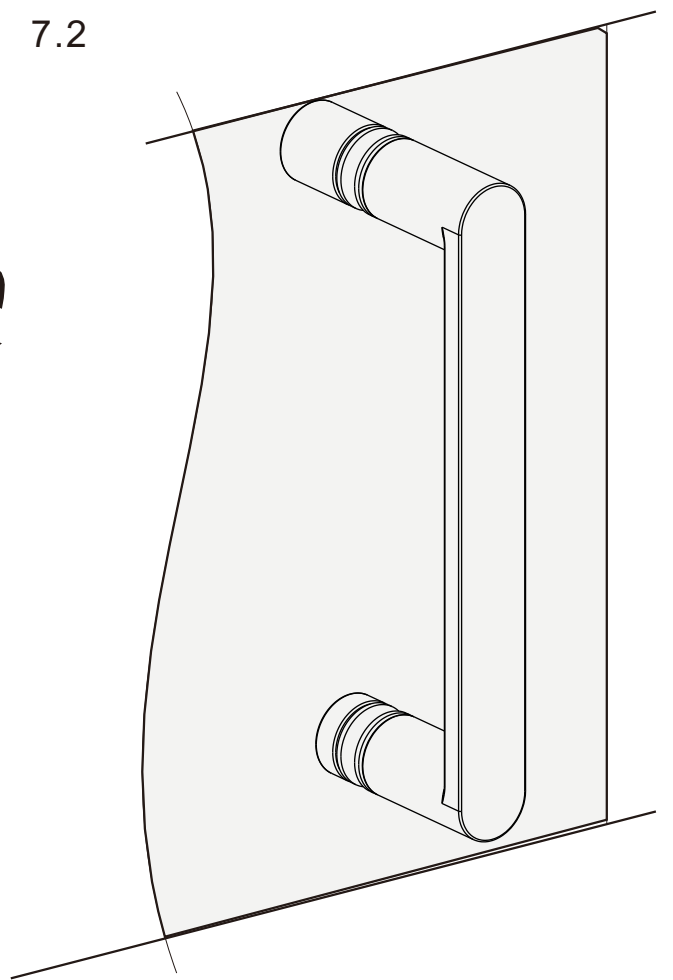

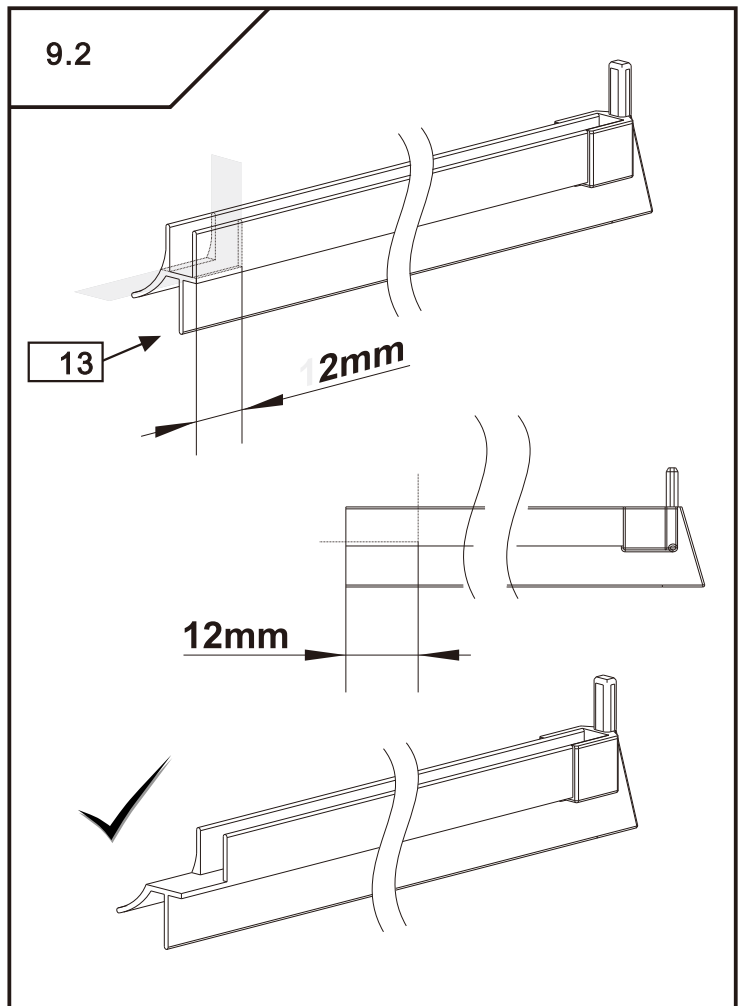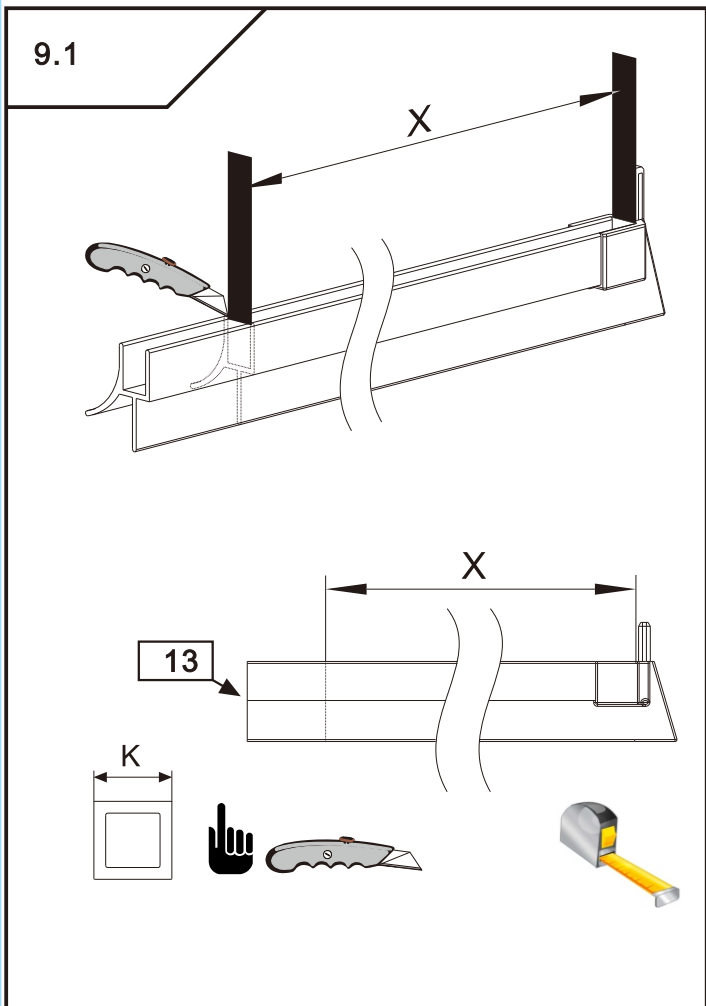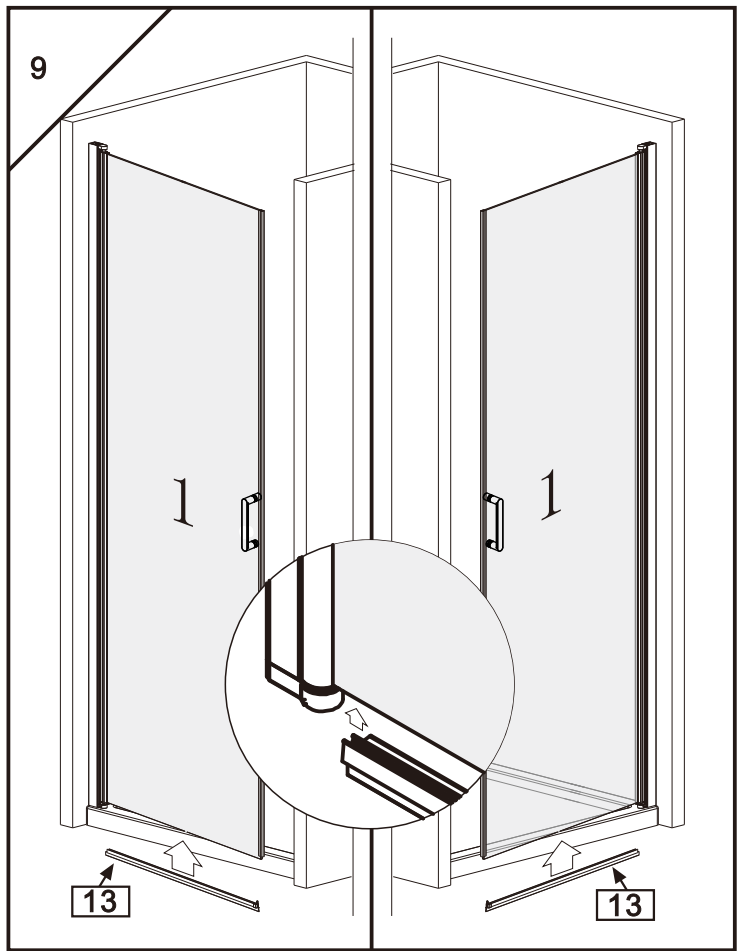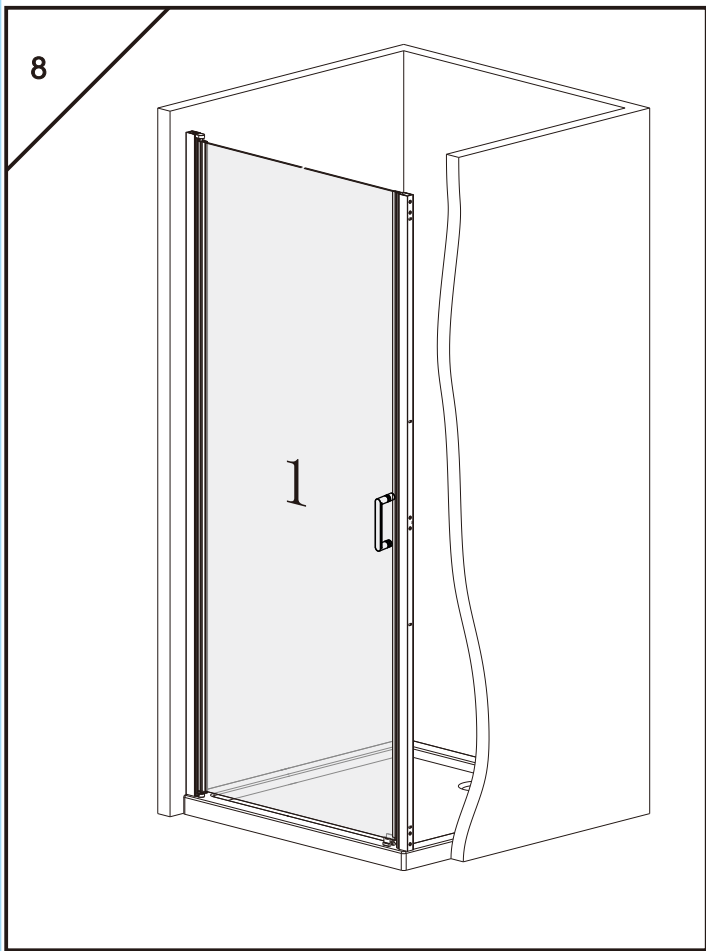


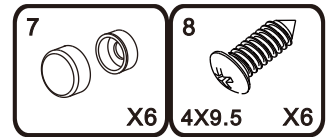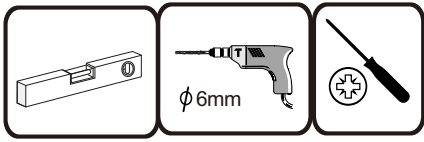

10

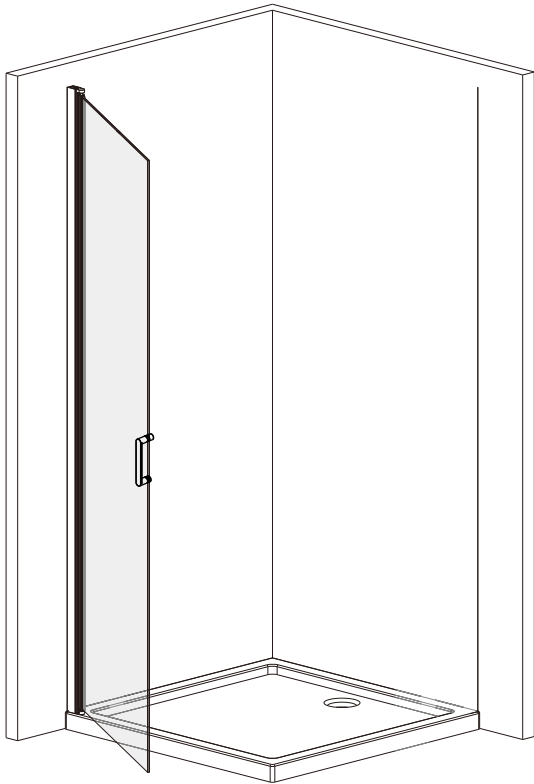 

 10.3

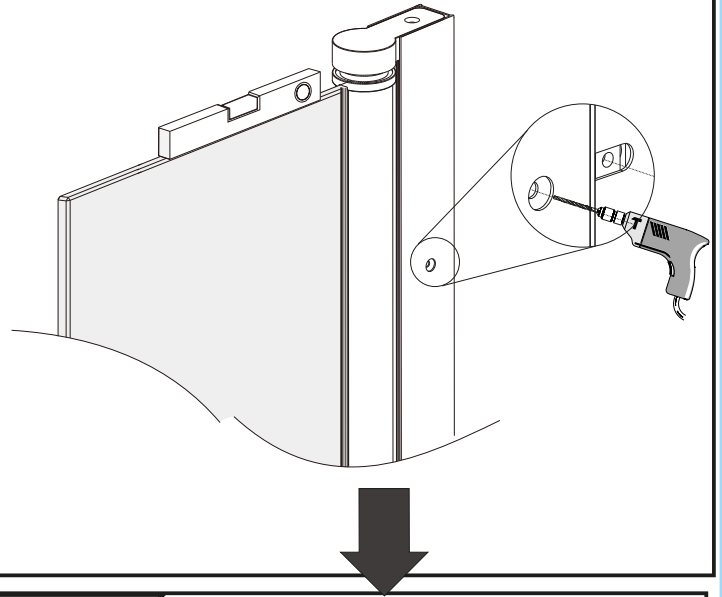

10.4

